
 


ACCESS THE INSTALLER PROGRAM MODE AND CONFIGURE EACH OPERATOR AS EITHER A MASTER OR A SLAVE.

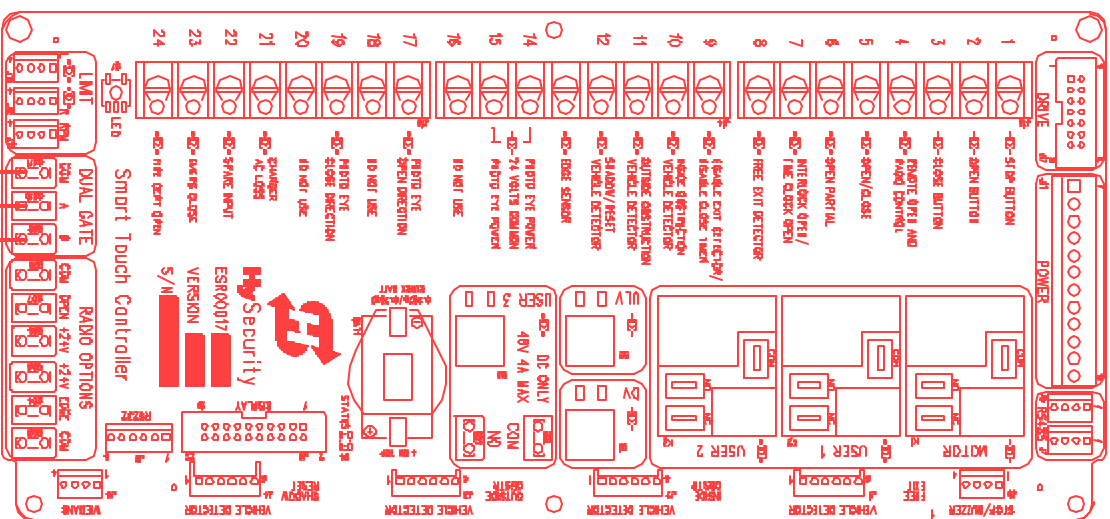

NOTE: USE ONLY 18-20GA TWISTED & SHIELDED TRIPLE WIRE.



HySecurity Inc. 6623 South 228th St. Kent Wa. 98032-1876

DESCRIPTION "MASTER / SLAVE" DUAL GATE

ECON NO. D0013	REV	CHANGE DESCRIPTION	REV BY	REV DATE	PART NO.	SHEET 1 OF 1
----------------	-----	--------------------	--------	----------	----------	--------------